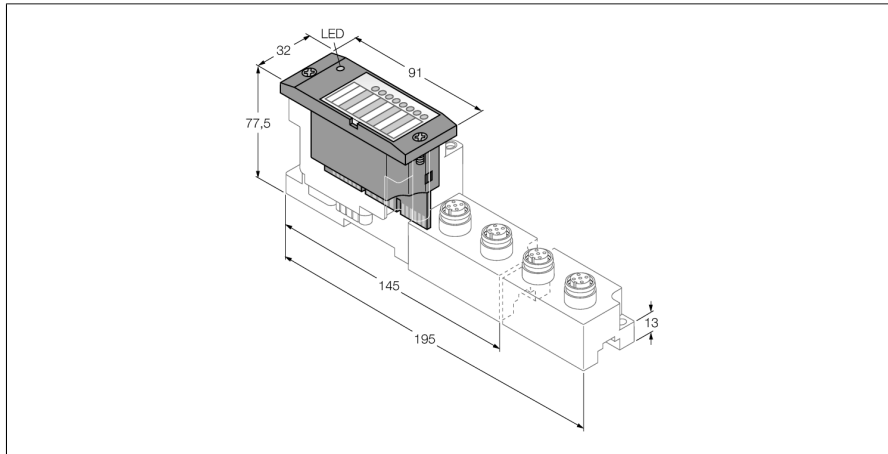


BL67 electronic module

4 Digital Inputs, PNP, Channel Diagnostics

BL67-4DI-PD



- Independent of the fieldbus and connection technology used
- Protection class IP67
- LEDs indicate status and diagnostic
- Electronics galvanically separated from the field level via optocouplers
- 4 digital inputs, 24 VDC
- PNP switching
- Channel diagnostics
- Wire-break monitoring
- Adjustable filter times
- Invertible inputs

Functional principle

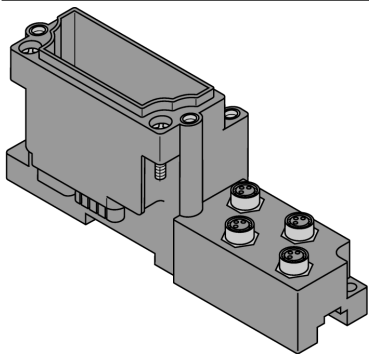
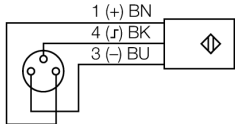
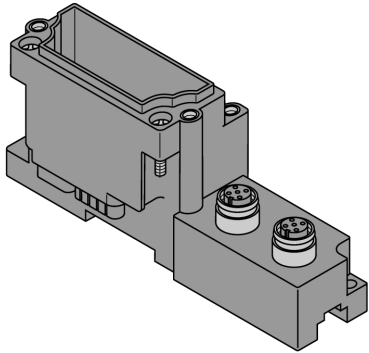
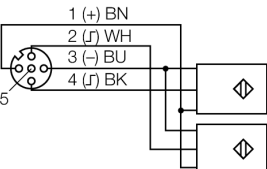
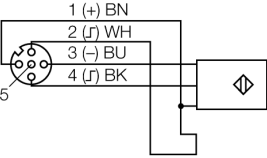
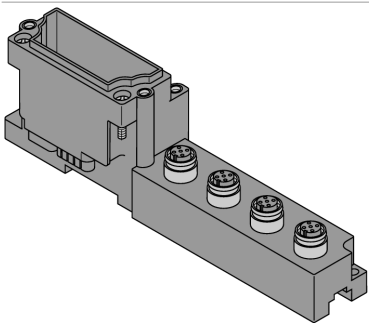

BL67 electronic modules are plugged on the purely passive base modules which in turn are connected to the field devices. The separation of connection level and electronics simplifies maintenance considerably. Flexibility is enhanced because the user can choose between base modules with different connection technologies.

The electronic modules are completely independent of the higher level fieldbus through the use of gateways.

Type	BL67-4DI-PD
ID	6827204
Number of channels	4
Supply voltage	24 VDC
Nominal voltage V_i	24 VDC
Nominal current from field supply	≤ 100 mA
Nominal current from module bus	≤ 30 mA
Max. sensor supply I_{sensor}	100 mA per channel, electronic short-circuit limiting
Power dissipation, typical	≤ 1.5 W
Input type	PNP
Type of input diagnostics	channel diagnostics
Low-level signal voltage	< 4.5 V
High level signal voltage	7...30 V
Low level signal current	< 1.5 mA
High level signal current	2.1...3.7 mA
Input delay	0.25 ms; 2.5 ms
Electrical isolation	electronics for the field level
Output connectivity	M8, M12, M23
Number of diagnostic bits	6
Number of parameter bytes	4

Dimensions (W x L x H)	32 x 91 x 59 mm
Approvals	CE
Ambient temperature	-40...+70 °C
Temperature derating	
< 0 °C Ambient temperature	Support for version VN 01-03 and higher, no limitation
Storage temperature	-40...+85 °C
Relative humidity	5...95 % (internal), level RH-2, no condensation (when stored at 45 °C)
Vibration test	Acc. to EN 61131
- up to 5 g (at 10 to 150 Hz)	for mounting on DIN rail no drilling according to EN 60715, with end bracket
- up to 20 g (at 10 up to 150 Hz)	for mounting on base plate or machinery Therefore every second module has to be mounted with two screws each.
Shock test	Acc. to IEC 60068-2-27
Drop and topple	acc. to IEC 68-2-31 and free fall to IEC 68-2-32
Electromagnetic compatibility	Acc. to EN 61131-2
Protection class	IP67
Tightening torque fixing screw	0.9...1.2 Nm

Compatible base modules

Dimension drawing	Type	Pin configuration
	BL67-B-4M8 6827189 4 x M8, 3-pole, female Comments Matching connection cable (for example): PKG3M-2-PSW3M/TXL Ident-No. 6625668	Pin Assignment  1 = VS _{SENS} 3 = GND 4 = Input A Wiring Diagram 
	BL67-B-2M12 6827186 2 x M12, 5-pole, female, A-coded Comments If the wire-break monitoring has been activated, on the sensor side a jumper between pin 1 (24 V DC) and pin 2 (diagnostics input) must be implemented for monitoring of wire-breaks. Note wire-break monitoring only in connection with the base module BL67-B-2M12 possible! BL67-B-2M12-P 6827194 2 x M12, 5-pole, female, A-coded, paired Comments If the wire-break monitoring has been activated, on the sensor side a jumper between pin 1 (24 V DC) and pin 2 (diagnostics input) must be implemented for monitoring of wire-breaks. Note wire-break monitoring only in connection with the base module BL67-B-2M12 possible!	Pin Assignment  1 = VS _{SENS} 2 = Input B 3 = GND 4 = Input A 5 = PE Wiring Diagram  Wiring diagram for wire-break monitoring 
	BL67-B-4M12 6827187 4 x M12, 5-pole, female, A-coded Comments Matching connection cable (for example): RKC4.4T-2-RSC4.4T/TXL Ident-No. 6625608	Pin Assignment  1 = VS _{SENS} 2 = n.c. 3 = GND 4 = Input A 5 = PE Wiring Diagram 

LED display

LED	Color	Status	Meaning
D		OFF	No error message or diagnostics active.
	RED	ON	Failure of module bus communication. Check if more than 2 adjacent electronic modules are pulled. Relevant modules are located between gateway and this module.
	RED	FLASHING (0.5 Hz)	Upcoming module diagnostics
DI channels 0...3		OFF	Status input x = 0 (OFF), no active diagnostics
	GREEN	ON	Input status x = 1 (ON)
	RED	ON	Wire-break monitoring active (LED 0 and 1)
	RED	FLASHING (2 Hz)	Overload sensor supply

Note:

The numbering of the LEDs corresponds to the numbering of the channels.

Data mapping

DATA	BYTE	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Input	n	-	-	-	-	DI 3	DI 2	DI 1	DI 0

n = Offset of input data; depending on extension of station and the corresponding fieldbus.

m = Offset of output data; depending on extension of station and the corresponding fieldbus.

With PROFIBUS, PROFINET and CANopen, the I/O data of this module is localized within the process data of the whole station via the hardware configuration tool of the fieldbus master.

With DeviceNet™, EtherNet/IP™ and Modbus TCP a detailed mapping table can be created with the TURCK configuration tool I/O-ASSISTANT.

Pin assignment at corresponding base module:

DATA	BYTE	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
------	------	-------	-------	-------	-------	-------	-------	-------	-------

BL67-B-4M8									
Input	n	-	-	-	-	C3 P4	C2 P4	C1 P4	C0 P4
BL67-B-2M12									
Input	n	-	-	-	-	C1 P2	C0 P2	C1 P4	C0 P4
BL67-B-2M12-P									
Input	n	-	-	-	-	C1 P2	C1 P4	C0 P2	C0 P4
BL67-B-4M12									
Input	n	-	-	-	-	C3 P4	C2 P4	C1 P4	C0 P4

C... = slot no., P... = pin no.